

microSD Card Quick Guide

The GoPro Hero uses a Micro 32GB SD Card for storage of photos and videos.

At checkout, the SD card has been inserted and the camera is ready for use.

1. Be sure the camera is powered OFF.



2. Insert the microSD Card into the camera. PRESS the card in firmly using a fingernail until it clicks into place.



Make sure the metal strips on the SD card are facing **away** from the battery. Please do not force the battery into the slot as it may damage the SD card and the camera.